

PHILLIP JEFFRIES

How to Install Hana Wallcovering

BEFORE YOU BEGIN

1. Read these instructions from beginning to end.
2. Check the item number to ensure you have the correct wallcovering.
3. Ensure you have enough wallcovering to complete the installation.
4. Inspect the wallcovering carefully to ensure it's free of defects. Please note, many PJ wallcoverings are natural and handmade with subtle variations in color and texture.
5. Hang and inspect three (3) strips of wallcovering.
6. If a defect is found in the material during inspection or the test hang, no additional materials should be hung until PJ is notified. **NO CLAIMS WILL BE ALLOWED FOR MORE THAN (3) STRIPS.** All claims must be made within 30 days of the invoice date for materials only. Labor claims will not be honored.

BUILDING & MATERIAL CONDITIONS

1. Building must be weather-tight with consistent HVAC settings to ensure the temperature and humidity are in keeping with an occupied building for 3 days before and after installation.
2. Wallcovering must be clean and dry and stored at normal occupied building temperature and humidity levels for at least 3 days prior to installation.
3. Walls must be structurally sound, smooth (level 4 or 5 finish) and free of moisture accumulation in the wall, or wall cavity.
4. Adhesives and primers must be new, high quality, commercial grade, and not contaminated.

WALL PREPARATION

1. Walls must be properly prepared to ensure the wallcovering adheres to the surface. Even the strongest adhesive only works when the surface is clean and properly prepared.
2. Use a hard, acrylic, pigmented primer that is specifically made for wallcovering installation and wall protection.
3. Do not use R-35.
4. Allow the primer to dry thoroughly before hanging.

PHILLIP JEFFRIES

How to Install Hana Wallcovering

HOW TO: Installation Guidelines

TIPS

1. This is a specialty natural wood product and special care should be taken when installing.
2. Use a soft brush or cloth when hanging, so that you do not damage the face of the wallcovering. Do not scrub or rub the metallic leaf.
3. Do not back roll the material if it does not lay flat after unpacking. It will relax once pasted.
4. Do not allow paste or excessive water to contact the front of the wallcovering as it will cause stains.
5. Due to the fine details of this pattern, this material is not recommended to wrap around corners.
6. This wallcovering is created first by hand-laying wood veneer pieces and then laser cutting cherry blossoms into the design. From there artisans apply metallic leafing by hand. This can lead to a distressed and slightly misplaced metallic leafing which is the inherent beauty of this product.
7. Due to the nature of Hana, the pattern match will vary slightly. For the best overall effect, ensure the pattern is matched at eye level.
8. Please note, a solid coordinate for Hana is available by special order. If this option is taken, we recommend the Hana pattern and the solid coordinate are made to order at the same time for as much dye lot consistency as possible.

PATTERN PLACEMENT

1. We recommend consulting with the Interior Designer or Client for design placement of the pattern.
2. Once wall height is determined, trim the height of the pattern to fit the wall.
3. Seams should be butted together to create a straight match. Do not reverse the strips.
4. Please refer to installation image on last page for example.

TRIMMING

1. The edges are untrimmed and will require cutting a precision edge on your worktable.
 - Trimmed width approximately 36" (91.4 cm)
 - Design Repeat: 132" (335.3cm) Vertical x 144" (365.7cm) Horizontal
2. Trim width is approximate, trim to pattern match.
3. When trimming, trim edges with a VERY sharp razor blade. Change your blade often

APPLYING ADHESIVE

1. Use a clear, heavy duty, pre-mixed vinyl adhesive.
2. Where available, we recommend Roman PRO-838 Heavy Duty Clear or Roman 234 Heavy Duty Clear, due to their low moisture content.
3. Apply the paste to the back of the wallcovering, this will make it more pliable.
4. DO NOT get paste on the face of the wallcovering. If paste does get on the face of the wallcovering, blot off immediately with a soft, moist rag and dry with a clean towel. Do not scrub or rub. Minimal wiping is suggested as this may slightly alter the face of the material.

BOOKING

1. Book the wallcovering very loosely to avoid creasing. Do not fold this wallcovering.
2. Allow the paste to become tacky prior to hanging (exact time will vary based on temperature, humidity, etc.).

MATCHING & HANGING

1. Hana is a straight match and is a seaming level III - Panels Beautifully. There will be noticeable seaming and paneling in the final installation.
2. Care should be taken to ensure the pattern is matched visually at eye level.

PHILLIP JEFFRIES

How to Install Hana Wallcovering


CARE INSTRUCTIONS

1. Wallcoverings may be cleaned using a soft brush attachment of a vacuum cleaner.
2. Do not scrub or rub the metallic leaf. When wiping this material, there will be a slight residue that will come off. Therefore. Minimal wiping is suggested, so the finish of the wallcovering is not altered.

PANEL SEQUENCE

1. The repeat is based on a 4-panel sequence.
2. Panels are marked starting with #1 then will follow with 2, 3, 4 as shown in the panel map. Panels may also be labelled A, B, C, D. (See Diagram B)
3. The pattern repeats in 4 panels. If you order more than the minimum of 4, then the pattern will repeat after the 4th panel. Ex. 1, 2, 3, 4, 1, 2, 3, 4, 1, 2, 3, 4.
4. Begin by establishing a vertical plumb line before hanging the first panel.

DESIGN DIAGRAM:

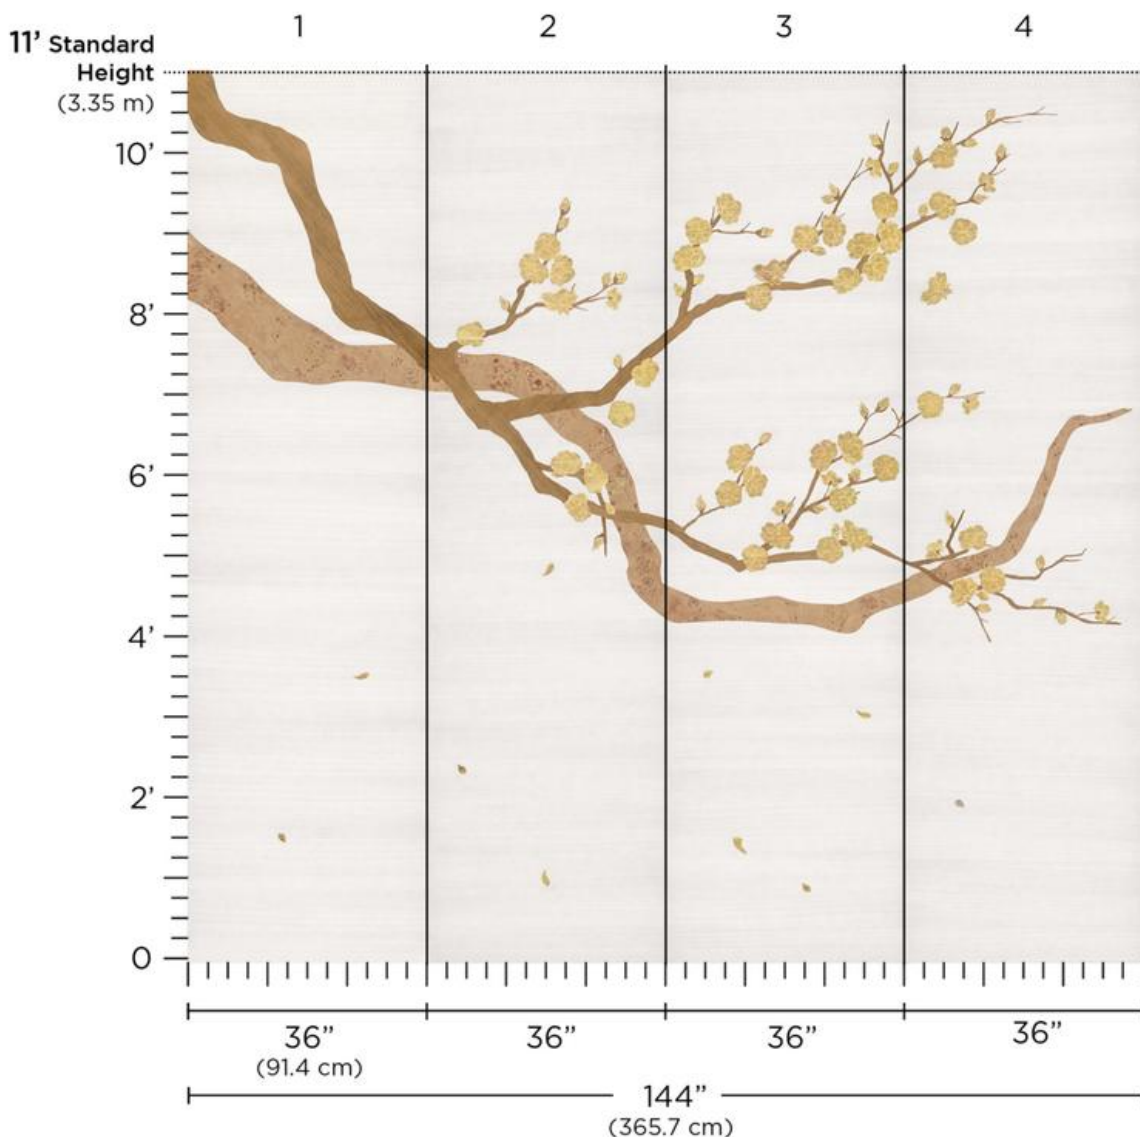

PHILLIP JEFFRIES

How to Install Hana Wallcovering

INSTALLATION WITH SEAMS:

